PREMIER®

MANUAL DE INSTRUCCIONES
TERMO HERVIDOR ELÉCTRICO
TH-5135

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
PANEL DE CONTROL 3
INSTRUCCIONES DE OPERACIÓN 4
FUNCIÓN DE APAGADO AUTOMÁTICO 5
OPERACIÓN 5
BOTÓN PARA HERVIR DE NUEVO 6
CUANDO NO ESTÉ EN USO 6
INSTRUCCIONES DE OPERACIÓN 7
RECOMENDACIONES 7
RESOLUCIÓN DE PROBLEMAS 8

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

Empaque de caucho de la tapa interna

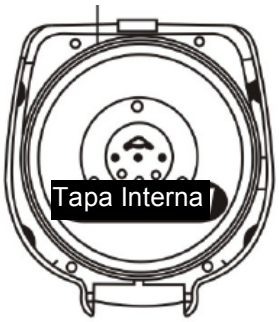

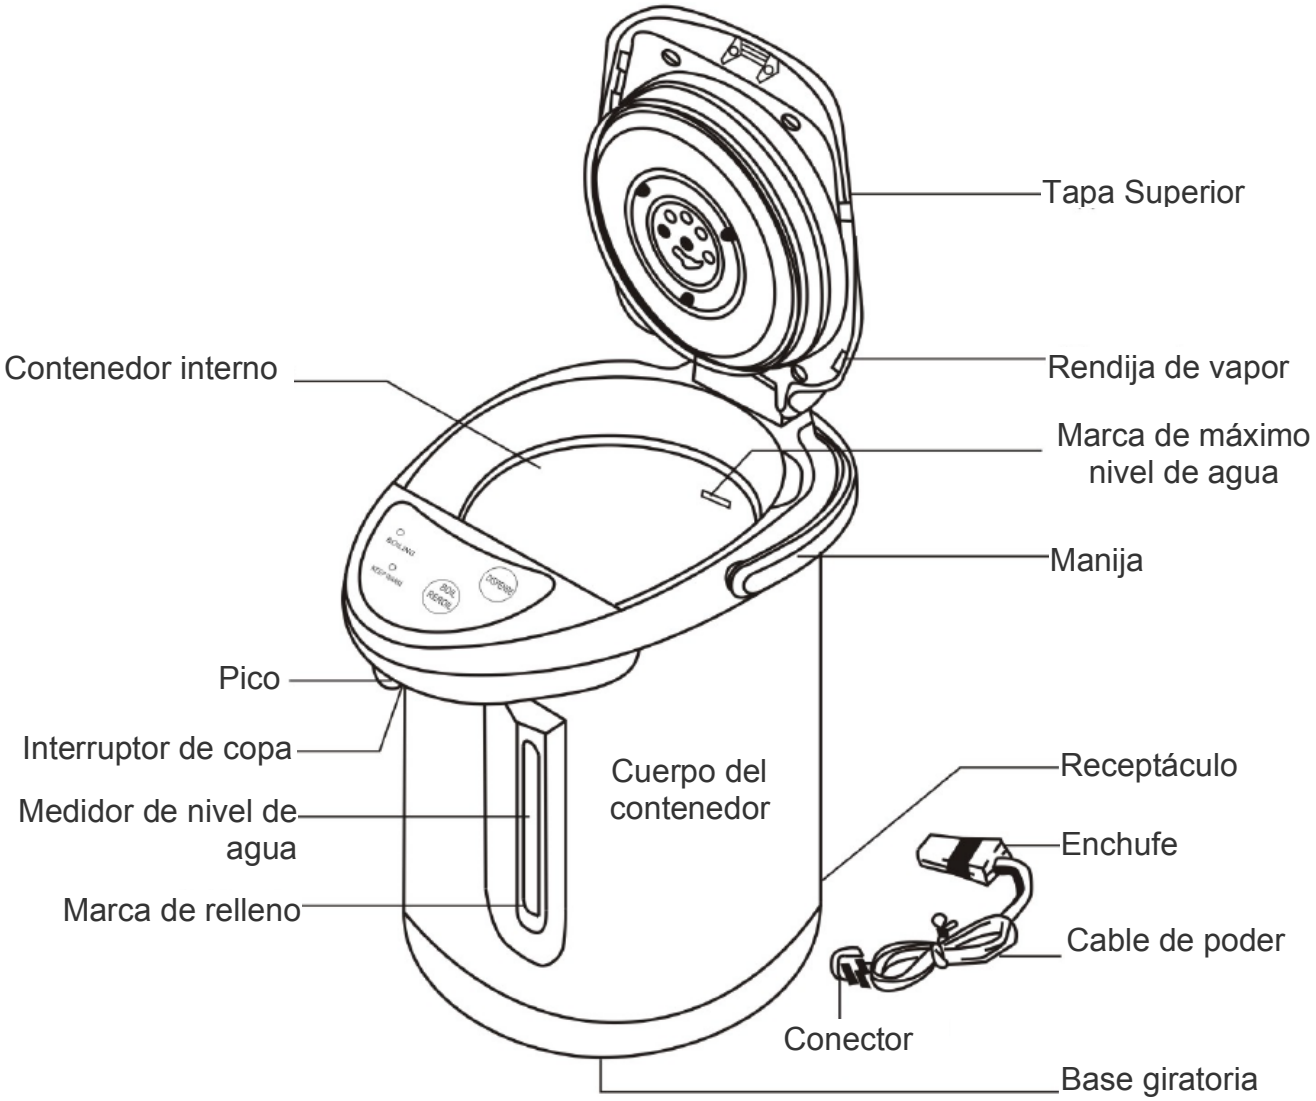

PANEL DE CONTROL

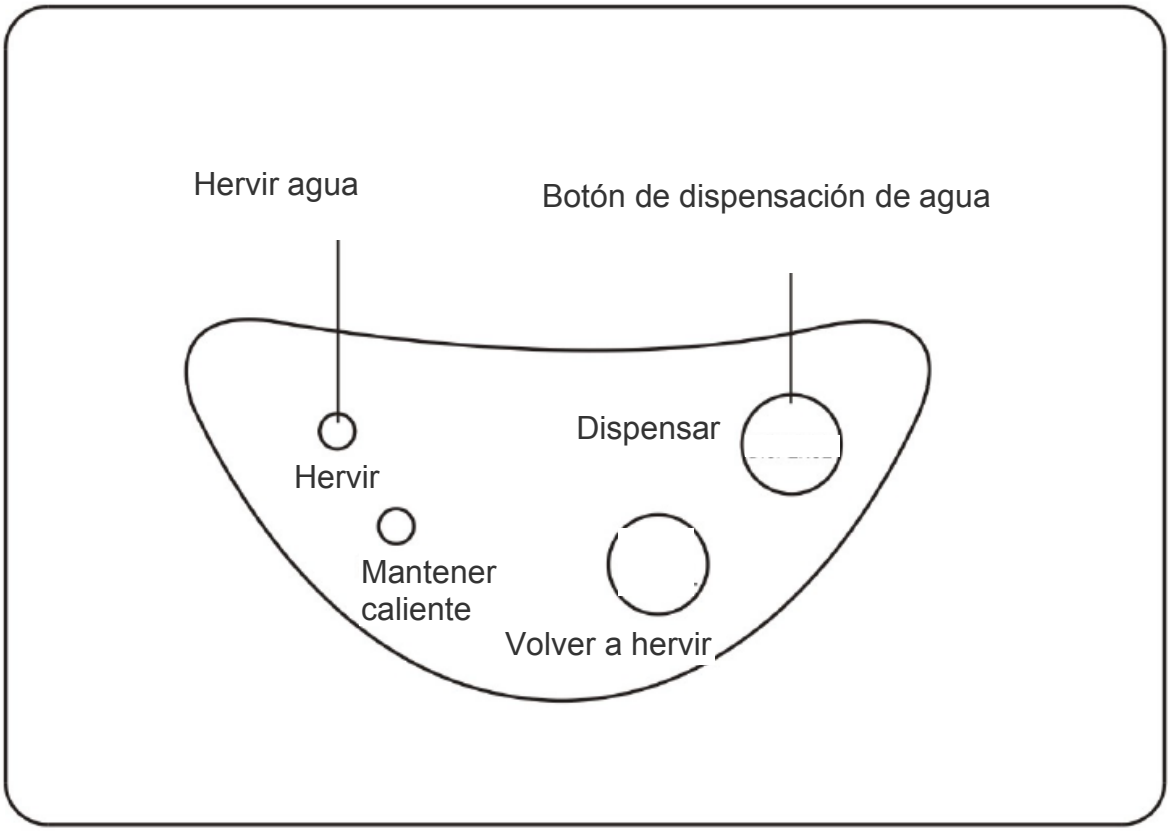

INSTRUCCIONES DE OPERACIÓN

Antes de utilizar la unidad por vez primera, hierva y descarte una jarra completa de agua como se indica a continuación. Tal vez note un olor a plástico la primera vez que utilice el dispensador. Esto es normal y se desvanecerá con el tiempo.

Recuerde que ni el agua ni materiales extraños deben entrar en contacto con el enchufe
BOILING
KEEP WARM
DISPENSE
BOIL REROIL

- Llene el contenedor de agua fría utilizando una jarra.
- Asegúrese de que el filtro del contenedor está bien puesto.
- No llene el contenedor directamente del agua de la llave para evitar un cortocircuito si el agua llega a salpicar por fuera.
- No agregue agua por encima de la marca del contenedor.
- Tenga precaución para no salpicar agua en el panel de control o en la parte exterior del dispensador. Salpicar agua puede dañar el dispensador y causar un choque eléctrico.
- Cierre la tapa presionando hacia abajo hasta que escuche un clic. Tal vez escuche un sonido cuando cierre y abre la tapa, lo cual es normal.

Al conectar el cable de poder el agua comienza a calentarse automáticamente. Tenga en cuenta lo siguiente:

- No abra la tapa superior.
- No toque el vapor que sale de la rejilla.
- No coloque ninguna prenda ni objeto sobre la rendija de vapor.
- No sirva agua caliente mientras está hirviendo.

FUNCIÓN DE APAGADO AUTOMÁTICO

Cuando exista el riesgo de daño por sobrecalentamiento, se activará la función de apagado automático. Esta función se activa en los siguientes casos:

- Cuando el cable de poder está conectado pero el contenedor está vacío.
- Cuando el cable de poder está conectado y se ha agotado toda el agua caliente, o la tapa se ha levantado para añadir agua.

Si el dispensador se ha apagado automáticamente, desconecte el cable de poder, permita que el contenedor se enfríe y agregue agua.

OPERACIÓN

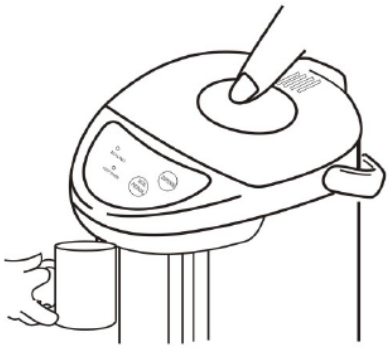

Para servir agua manualmente

Presionando la copa contra el pico

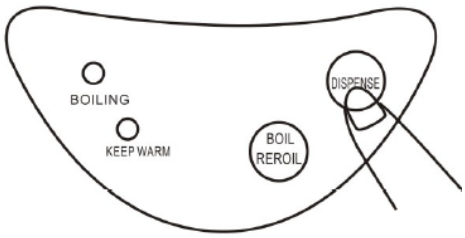

Presionando el botón de servir en el panel de control

BOTÓN PARA HERVIR DE NUEVO

Cuando el dispensador esté en modo de “mantener caliente”, utilice este botón para volver a hervir el agua.

Presione el botón para hervir de nuevo; la luz indicadora se encenderá.
Cuando el agua se haya hervido de nuevo, la luz indicadora de “mantener caliente” se encenderá.

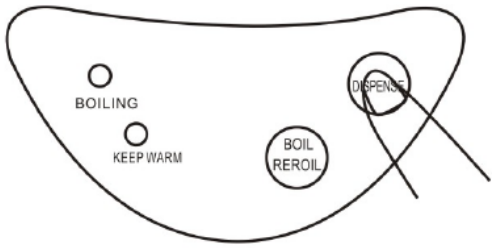

- Volver a hervir un contenedor lleno toma alrededor de cinco minutos a una temperatura ambiente de 20 grados.
- Antes de volver a hervir asegúrese que el nivel del agua está por encima de la marca de rellenado.
- El botón de volver a hervir no tendrá efecto justo después de que el agua se haya hervido.

CUANDO NO ESTÉ EN USO

- Desconecte el dispensador y quite la tapa.
- Bote el agua restante.
- Para evitar quemarse retire siempre la tapa antes de servir el agua caliente.
- Vacíe el contenedor al menos una vez al día. (El agua que se deje en el contenedor puede causar óxido, olores desagradables y acumulación de depósitos minerales).
- No permita que el agua salpique sobre el panel de operación ni sobre el enchufe.
- Tenga precaución en cuanto a no perder el filtro del contenedor.

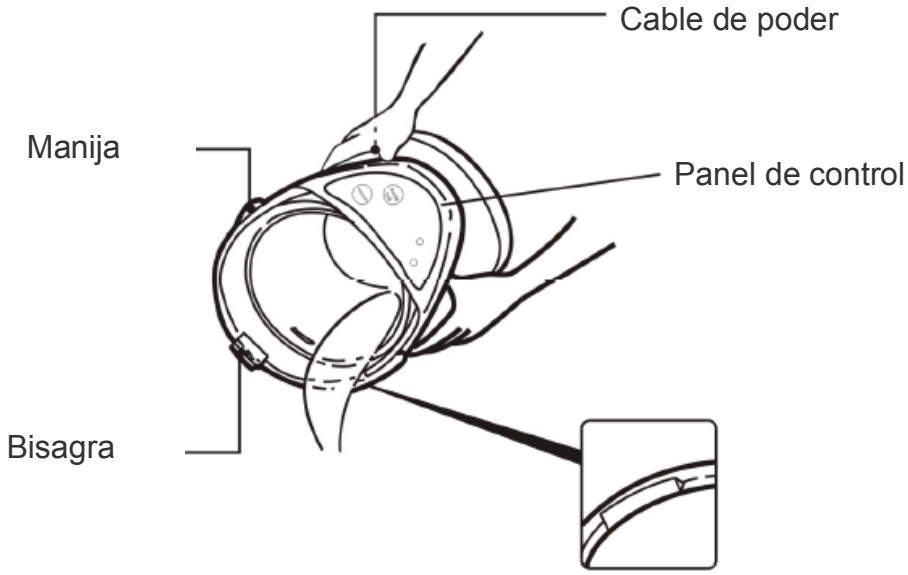

INSTRUCCIONES DE OPERACIÓN

- No permita que los pines ni otros objetos metálicos entren en contacto con el enchufe magnético para evitar el riesgo de choque eléctrico y cortocircuito.
- Desconecte el cable de poder del enchufe, mas no del cable.
- No intente servir agua caliente mientras está hirviendo o inmediatamente después de que ha hervido.
- No coloque el dispensador sobre una superficie plana inestable o sobre superficies que se puedan calentar.
- Desconecte el cable de poder cuando no esté utilizando la unidad.
- Para evitar quemaduras, no toque la rendija de vapor.
- Tenga especial cuidado con los niños si se encuentran cerca.
- Cuando abra la tapa no permita que el vapor entre en contacto con su piel.

RECOMENDACIONES

- No encienda el dispensador si está vacío para evitar daños.
- Tenga precaución si utiliza el dispensador en una repisa en la cocina o a 30 cm de la pared u otros objetos. Si el vapor entra en contacto con el techo, las paredes u otros elementos, puede causar descoloración.
- No utilice el dispensador cerca de una fuente de calor.
- No arrastre el dispensador para evitar rayar la superficie.
- No coloque hielo, sopas, leche, comidas instantáneas, té, ni otras sustancias excepto agua en el dispensador. Hervir agua con té o comidas instantáneas puede causar que se forme espuma y el contenido salga y usted se puede quemar. También puede quemar o descomponer los alimentos al igual que pelar el recubrimiento antiadherente. Además, algunas partículas pueden obstruir la bomba eléctrica interna, evitando que el agua sea servida.

IMPORTANTE

Los cables en el cable de poder tienen un color según el siguiente código:
Verde y amarillo: Tierra - Café: Vivo - Azul: Neutro
Si los colores de los cables en el cable principal de esta aplicación no corresponden con los de su enchufe, siga este procedimiento.

- El cable de color verde y amarillo debe conectarse a la terminal del enchufe que está marcada con la letra E o con el símbolo de tierra, o de color verde o verde-amarillo.
- El cable de color azul debe conectarse a la terminal marcada con la letra N o de color Negro.
- El cable de color café debe conectarse a la terminal marcada con la letra L o de color Rojo o Café.

Si el cable de poder está dañado haga que sea revisado y reparado.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
El agua no hierve bien.	Verifique la conexión del cable de poder. Verifique que no hay objetos metálicos ni suciedad en el cable.
El agua no sale lo suficientemente caliente o no se sirve fácilmente	Verifique la conexión del cable de poder. Puede haber depósitos minerales, los cuales deben ser limpiados.
El agua se derrama de la jarra	Verifique que el agua no se haya agregado más allá de la línea indicadora de máximo nivel
Hay depósitos blancos en el agua caliente	Los depósitos se forman por contenido mineral del agua que está utilizando. No se deben a la corrosión o raspado de la parte interna del contenedor. Limpie muy bien el contenedor con agua hirviendo con ácido cítrico.
Se escuchan sonidos fuertes	Puede haber una acumulación excesiva de depósitos minerales, que generan este tipo de ruido. Limpie muy bien el contenedor con agua hirviendo con ácido cítrico.
El agua tiene un olor desagradable	Puede ser cloro que viene junto con el agua de la llave.

• Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL

ELECTRIC AIRPOT

TH-5135

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

PART NAMES

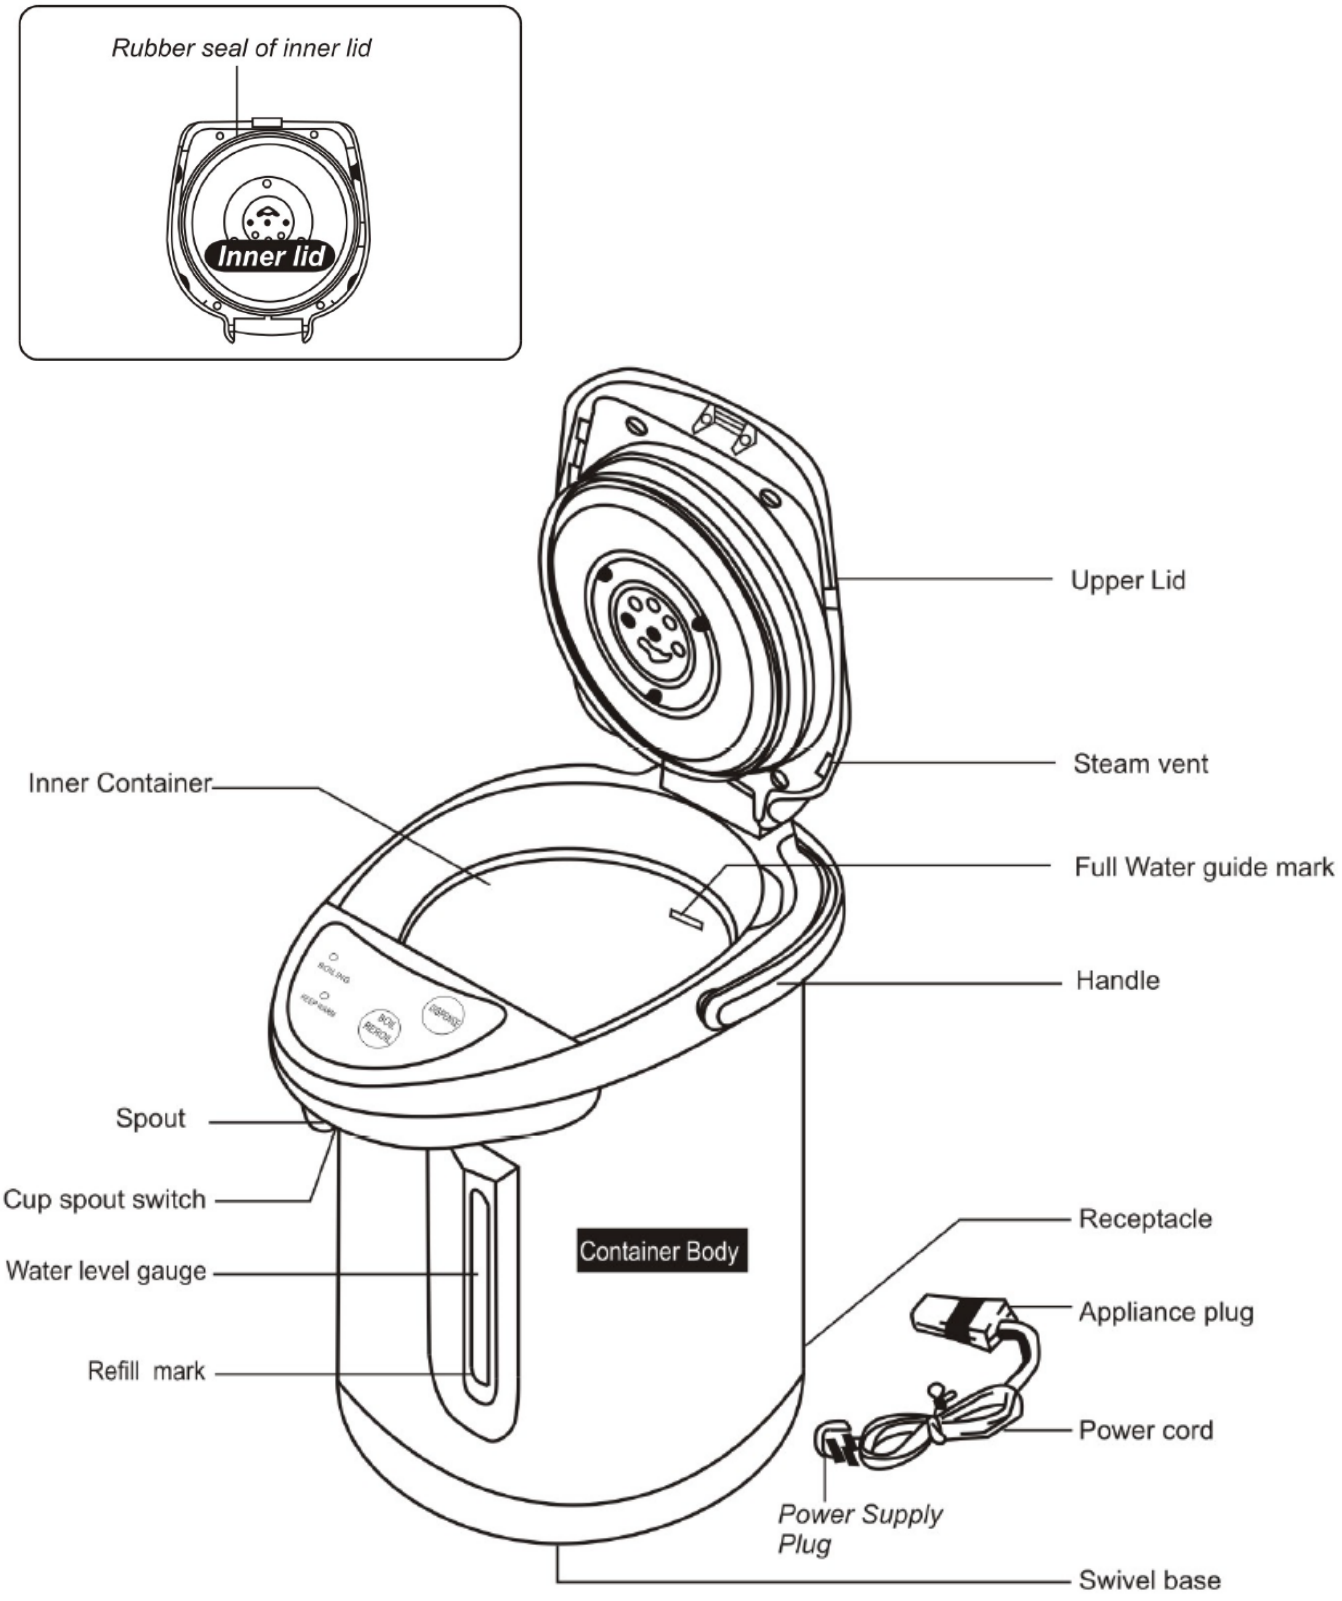

Note: Diagran differs depending on model.

CONTROL PANEL

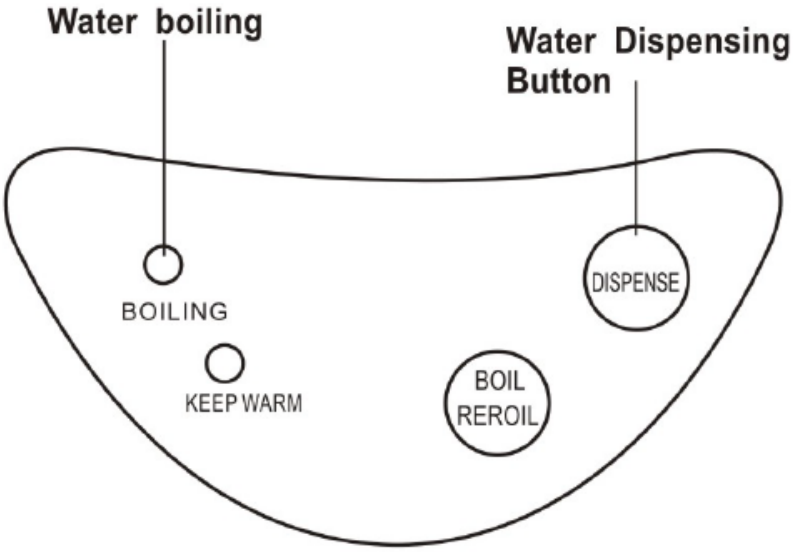

HOW TO USE

Before using your dispenser for the first time, boil and discard one full pot of water by following the instructions below. You may notice a smell of plastic for the first time when you use the dispenser. This is normal and will fade over time.

Fill the container by pouring cold water from another container such as a jug.

✳ Be sure the container filter is in place.

- Do not fill the container directly from the tap, as overflowing water could cause a short circuit or electric shock.
- Do not add water above full-water guide mark on the inside of the container. Hot water may overflow, causing scalds.
- Be careful not to splash water on the control panel or on the outside of the dispenser. Splashing water can damage the dispenser and cause an electric shock.

Close the lid.

- Carefully close the lid by pushing down until you hear a click.

✳ You may hear a rattling sound when opening and closing the lid. This is normal.

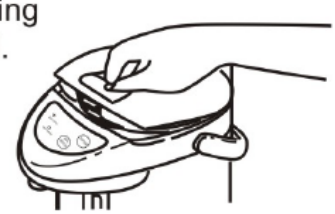

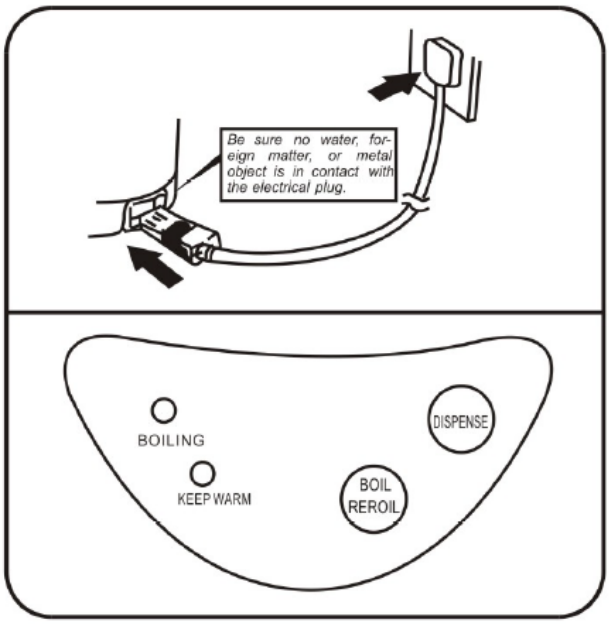
Be sure no water, foreign matter, or metal object is in contact with the electrical plug.
BOILING
KEEP WARM
BOIL REROIL
DISPENSE

When you plug in the power cord, the water will automatically begin to boil.
While the water is boiling, avoid bums as follows:

- Do not open the upper lid.
- Do not touch the steam coming out of the steam vent.
- Do not place a cloth or any other items over the steam vent.
- Do not dispense hot water while the water is boiling.

About the auto cut off feature

When there is danger of damage from overheating, the auto cut-off feature will operate. The auto cut-off feature operates in the following cases:

- When the power cord is plugged in but the container is empty of water;
- When the power cord is plugged in and all the hot water has been used, or the lid has been removed so that water can be added.

If the dispenser has been shut off automatically, unplug the power cord from the eletrical outlet, wait for the container to cool, and add water.

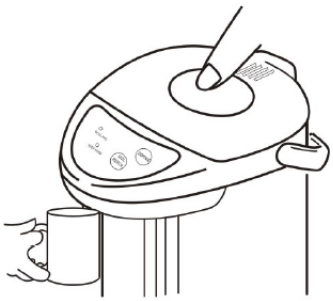

To dispense water
By Manualpumping

By pushing cup
against spout switch

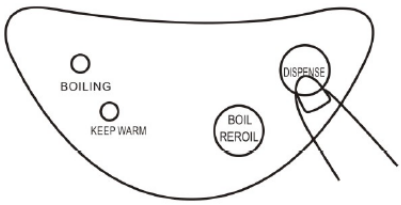

By pressing
the dispense button
on the control panel

Re-boil key

When the dispenser is in keep-warm mode, use this key to re-boil the water.

Press the re-boil button.

The boil lamp will light.

Once the water has re-boiled, the keep-warm lamp will light.

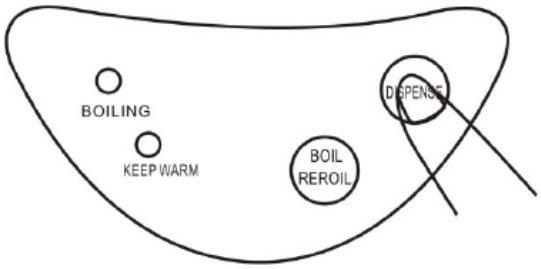

Re-boiling a full container takes about 5 minutes (at a room temperature of 20 degrees).

- ✳ **Before re-boiling. make sure the water level is above the refill mark.**
- ✳ **The re-boil key has no effect right after the water has boiled.**

When not in use

1. Unplug the dispenser and detach the lid.

2. Pour out remaining water

- ✳ To avoid getting Scalded always detach the lid before pouring out the hot water.
- ✳ Empty the container at least once a day. (Water left in the container can cause rusting, unpleasant odor, and accumulation of mineral deposits.)
- ✳ Do not allow water to splash onto the operation panel, hinge, handle or power supply plug. (Splashed water can cause burns or damage the dispenser.)
- ✳ Be careful not to lose the container filter.

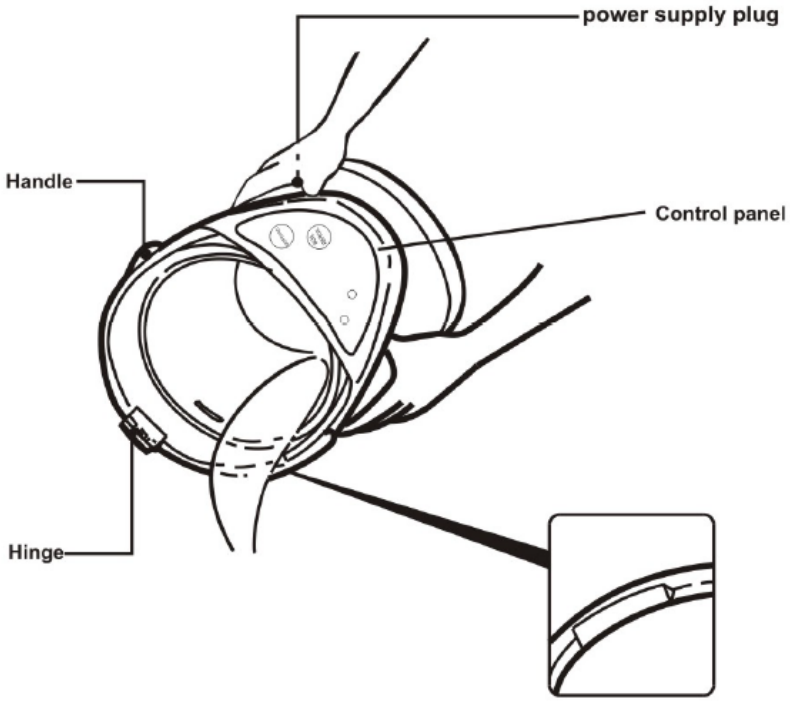

PRECAUTION

Caution

Do not allow pins or other metal objects to contact the magnetic appliance plug.

- Contacting metal objects may cause electric shocl, a shock circuit, and fire.

Always grasp the power supply plug when unplugging the power cord.
Do not pull the power cord itself.

- Doing so may cause an electric shock, a short circuit, or fire.

Do not attempt to pour hot water while it is boiling or immediately after it has boiled.

- Hot water can spurt out and cause scalds.

Do not place the dispenser on an unstable surface or on surfaces that are vulnerable to heat.

- Doing so may cause fire.

Unplug the electrical plug from the outlet when the dispenser is not being used.

- The insulation could become damaged, resulting in injury, burns, electric shock, leakage of electricity, or fire.

To avoid burns, do not touch the steam vent.

- Be especially careful that children do not touch it.

When opening the lid, do not allow the steam to contact your skin.

- Hot steam can scald your skin.

Notes

Do not turn on the dispenser if it is empty.

- Doing so may cause fire or other damages.

Be careful when using the dispenser on a kitchen storage shelf or within 30 cm of a wall or furniture.

- If steam contacts the ceiling, wall, or other items, it may cause discoloration or distortion of nearby objects or surfaces.

Do not use the dispenser near a heat source.

- Doing so may cause fire or other damages.

Do not drag the dispenser.

- It can scratch the surface of the table or counter.

Do not put ice, soup, milk, instant foods, tea, or any other substance except water into the dispenser.

- Boiling water containing a tea bag, tea leaves, or instant foods can cause the water to foam and the contents of the pot to spurt out and burn you. It can also result in burning and decomposition of the food as well as peeling of the non-stick fluorine coating on the container.
  In addition, foreign objects may obstruct the internal electrical pump, preventing water from being dispensed.

Condition	Cause	Remedy
Water does not boll.	Plug is not plugged into electrical outlet.	Check the plug connections.
	Metal object or dirt is on the tip of the magnetic plug.	Clean the tip of the magnetic plug.
Water does not become hot or does not pour properly.	Plug is not plugged into elecrical outlet.	Check the plug connections.
	Mineral deposits or the like hace accumulated on the inner container and container filer.	Clean the container and the container filter.
	Hot water does not pour properly a few minutes after boiling.	Open the upper lid once to release air bubbles. Close the lid.(Watch out for steam when opening the upper lid.)
Water pours out by itself.	Check that the pot is not filled beyond the full-water guide mark.	Pour out the excess amount of water until it is below the full-water guide mark.
White deposits appear in the hot water.	Deposits are fomed by the mineral content of the water you are using. They are not due to corrosion of the inner container or peeling of the non- stick fluorine coating.	Clean the inner container by boiling water mixed with citric acid
Loud boiling sounds can be heard.	Excessive accumulation of mineral deposits and the like on the inner container can cause loud boiling sounds.	
Hot water has a disagreeable odor.	The odor of chlorine may be detectable in your tap water.	
	A mild plastic odor may be noticeable in a new dispenser. This odor will fade over time.	

WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:
Green-and-yellow:Earth Brown:Live Blue:Neutral

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or cololured BLACK.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured RED or Brown.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.